


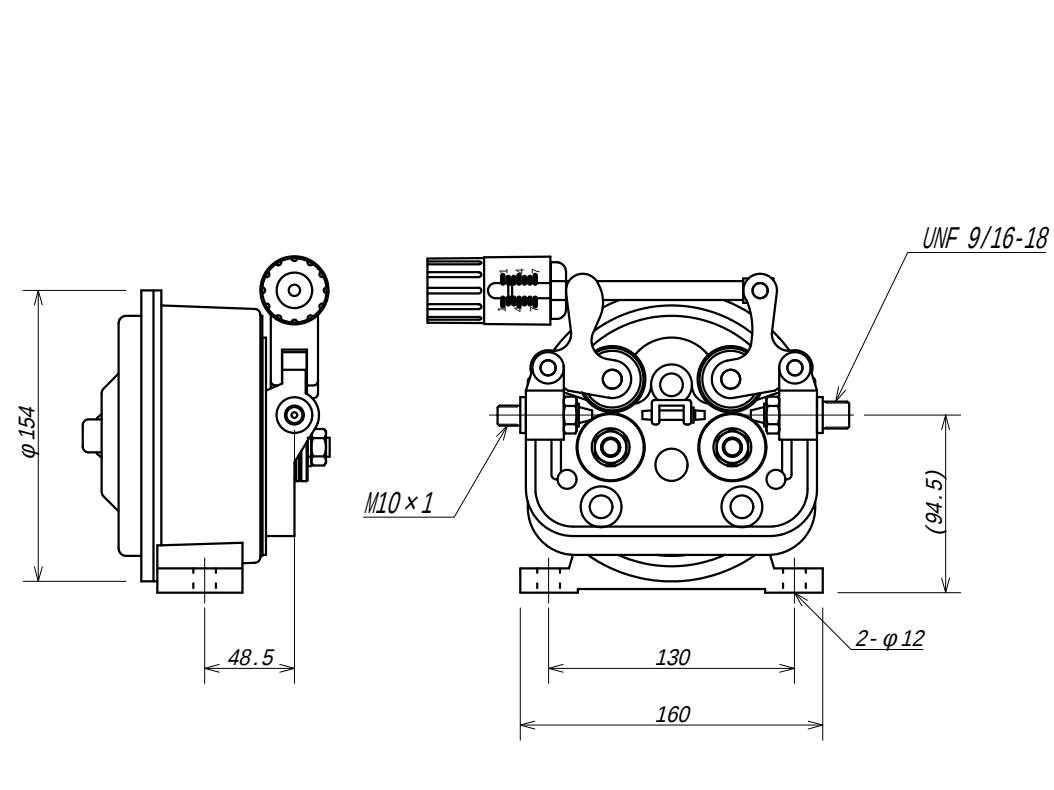


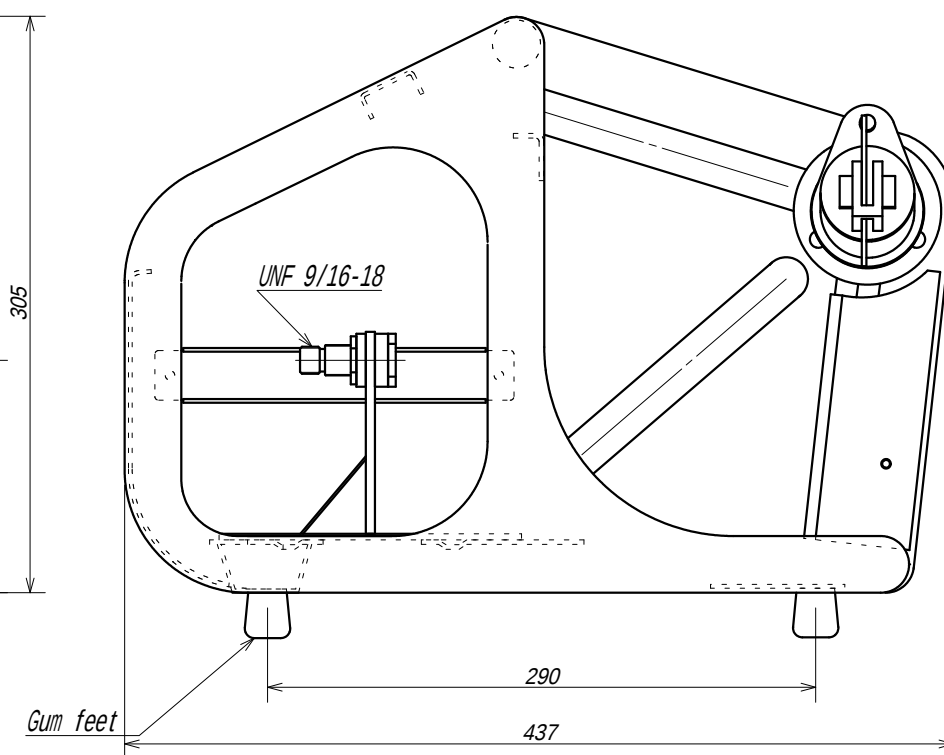

- Be sure to use insulation board and insulation collar for fixing the motor.
- For use with R specification, the wire straightener can be applied instead of inlet guide.

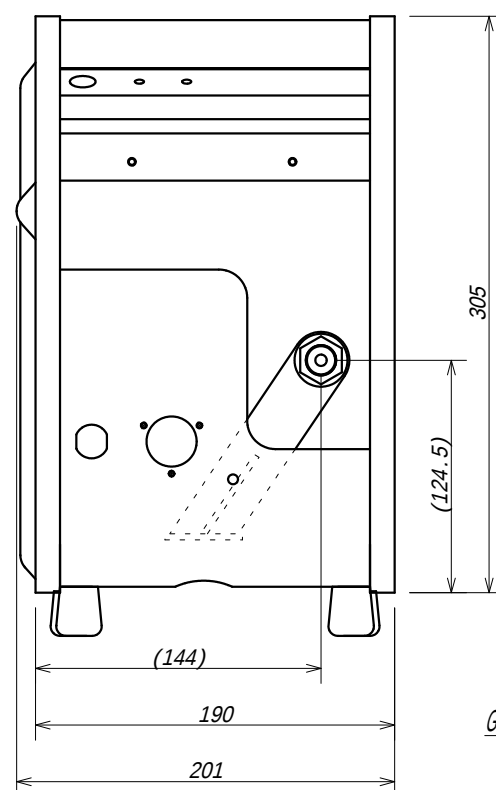

- Remove the gum feet when the feeder is unstable.
- The feeder can be used with the gum feet off.

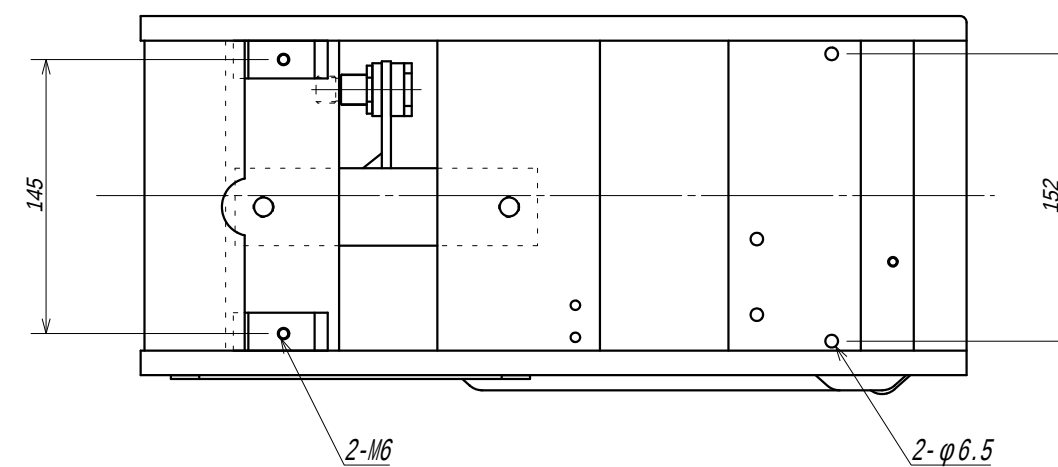

Remove the wire feeding motor before installing the option intermediate flexible conduit fixture(NF-1601)